





Instruction for Installation

1. Installation Position on the Car

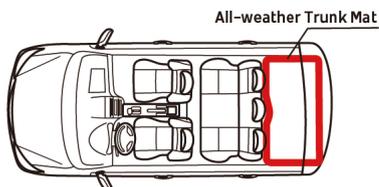

2. Packing List

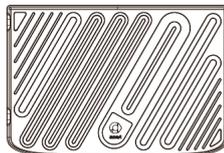

Trunk Mat x 1
Instruction for Installation x 1
Warranty Card x 1
Certificate x 1

3. Notes


- Please ensure that the original suede and structure of the car have not been modified or changed. If there is a mounting pad or protective film on the suede of the new car trunk, it needs to be removed, otherwise the normal loading effect and anti-skid effect of the mat will be diminished;
- Avoid scratches and damage to the mat and other vehicle parts during installation;

4. Installation Duration


Standard installation time: three minutes (installation personnel (as recommended): one)

5. Installation Steps

- 1 Before installation, clean up the sundries in the trunk to facilitate the next operation;
- 2 After the trunk mat is prepared, place the mat in the trunk and adjust it slightly to an appropriate position, and then press the side of the mat to the corresponding position;

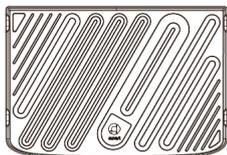

Front View

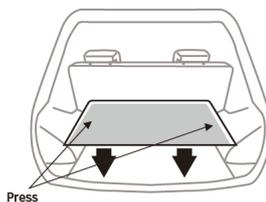

6. Functional Verification

- 1 Check whether the trunk mats have been laid flat, and whether there are folds and arches;
- 2 After confirmation, the installation ends here.



OM111111EN