





安装说明书 | Installation Instruction

前排 | Front row

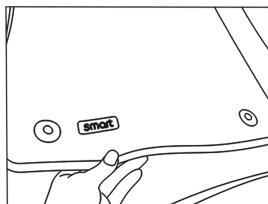


1. 拉开座椅，将脚垫铺设于原车地毯各处

1. Adjust the seat and lay the floor mat on the original carpet.

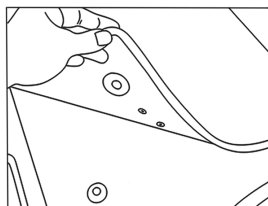


2. 将地毯上固定卡扣插入脚垫预留处

2. Insert the fixing buckle on the carpet into the reserved place of the floor mat.

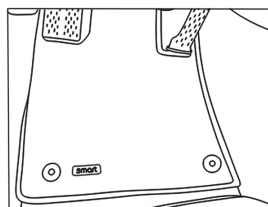

3. 将脚垫卡合到位


3. Snap the floor mat in place.

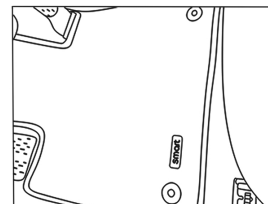

4. 平按脚垫各个部分，确保脚垫与原车地毯服帖


4. Press each part of the floor mat to ensure that it fits the original carpet.

后排 | Back row

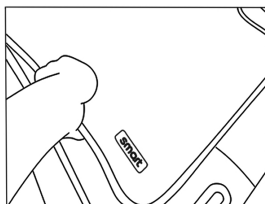


1. 拉开座椅，将脚垫平铺于后排座椅前方

1. Adjust the seat and lay the floor mat in front of the back seats.

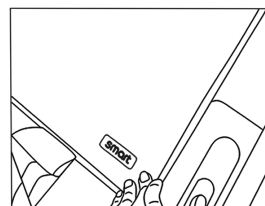

2. 平按脚垫各个部位，确保该脚垫与原车服帖

2. Press each part of the floor mat to ensure that it fits the original carpet.

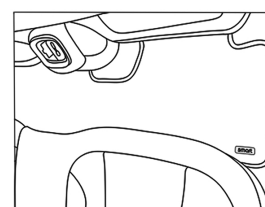

3. 检查服帖后，将座位复位，安装完成

3. After checking the floor mat, reset the seats and complete the installation.



OM333333EN