




# Installation Instruction

Product Name: TPE Trunk Mat\_smart #3

## 1. Installation Position on the Car

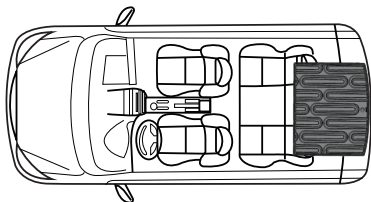

## 2. Packing List



TPE Trunk Mat x1  
Installation Instruction x 1  
Warranty Card x 1  
Certificate x 1

## 3. Notes



- Please ensure that the original carpet and structure of the car have not been modified or changed. If there is other mat or protective film on the surface of trunk floor, it needs to be removed, otherwise it will have adverse effects on anti-slip and positioning.
- Avoid scratches and damage to the mat and other vehicle parts during installation.

## 4. Installation Duration

Standard installation time : three minutes  
Number of people recommended for the installation: 1

## 5. Installation Steps

1. Before installation, clean up the sundries in the trunk to facilitate the next operation.
2. After the trunk mat is prepared, place the mat in the trunk and adjust it slightly to an appropriate position, and then press the side of the mat to the corresponding position.

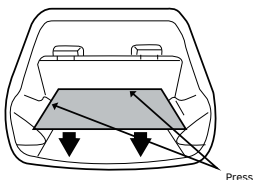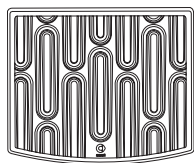

## 6. Functional Verification

1. Check whether the trunk mats have been laid flat, and whether there are folds and arches.
2. After confirmation the installation ends here.

